


Zivid On-Arm Mount

User Guide

(ZVDA-MNT-OA111)
(ZVDA-MNT-OA121)
(ZVDA-MNT-OA211)
(ZVDA-MNT-OA221)

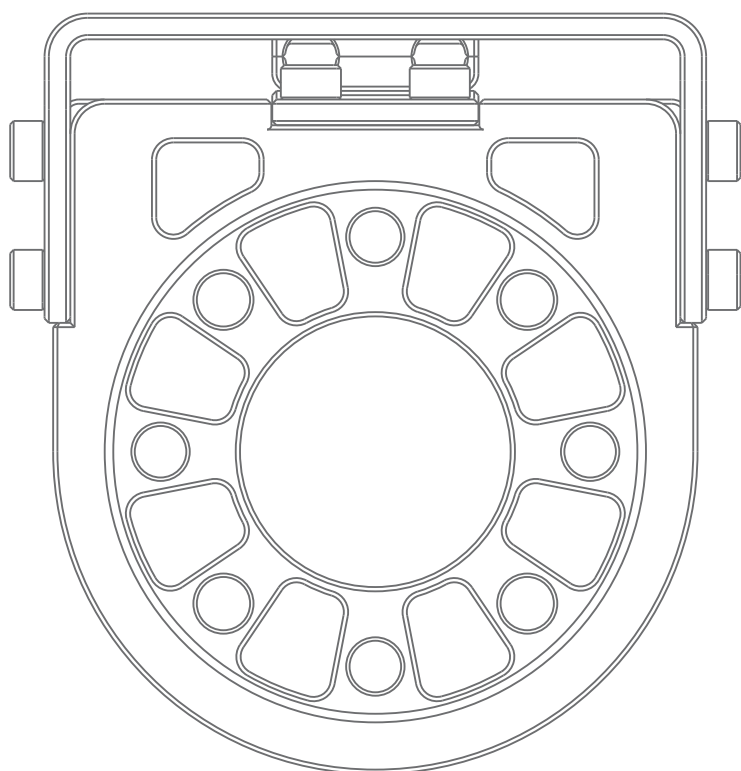


Getting Started

Tools



Torx 30/25, 20 and 10



What's in the box?


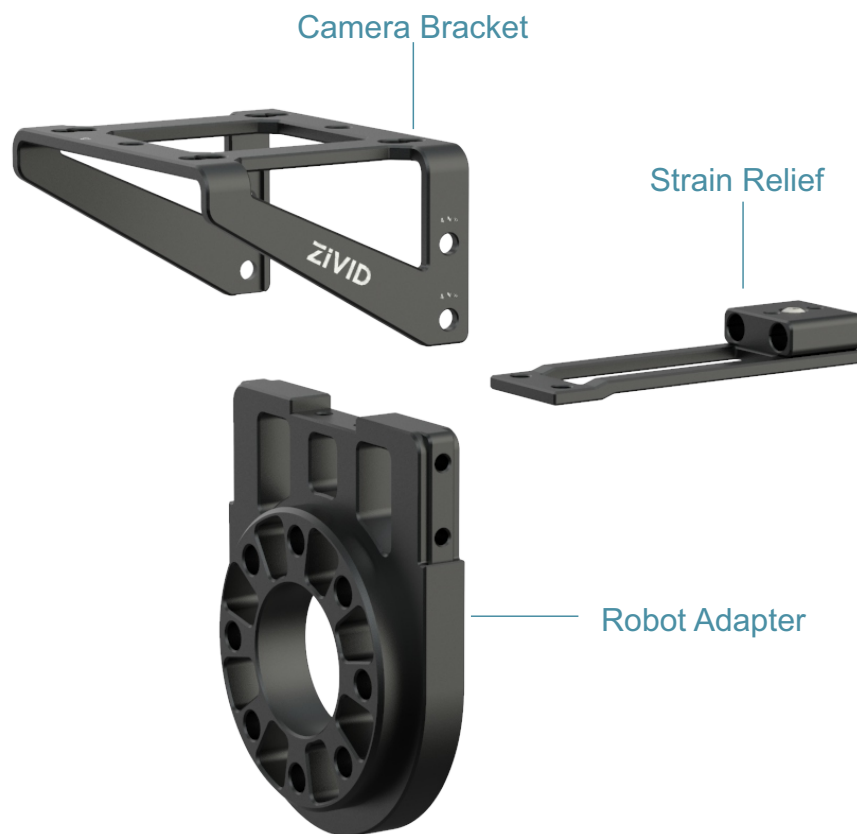


Screws

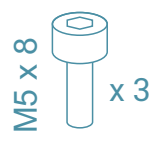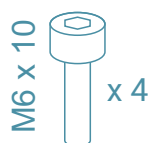

1

Install the robot adapter. Check appropriate documentation for recommended screw type and torque values.

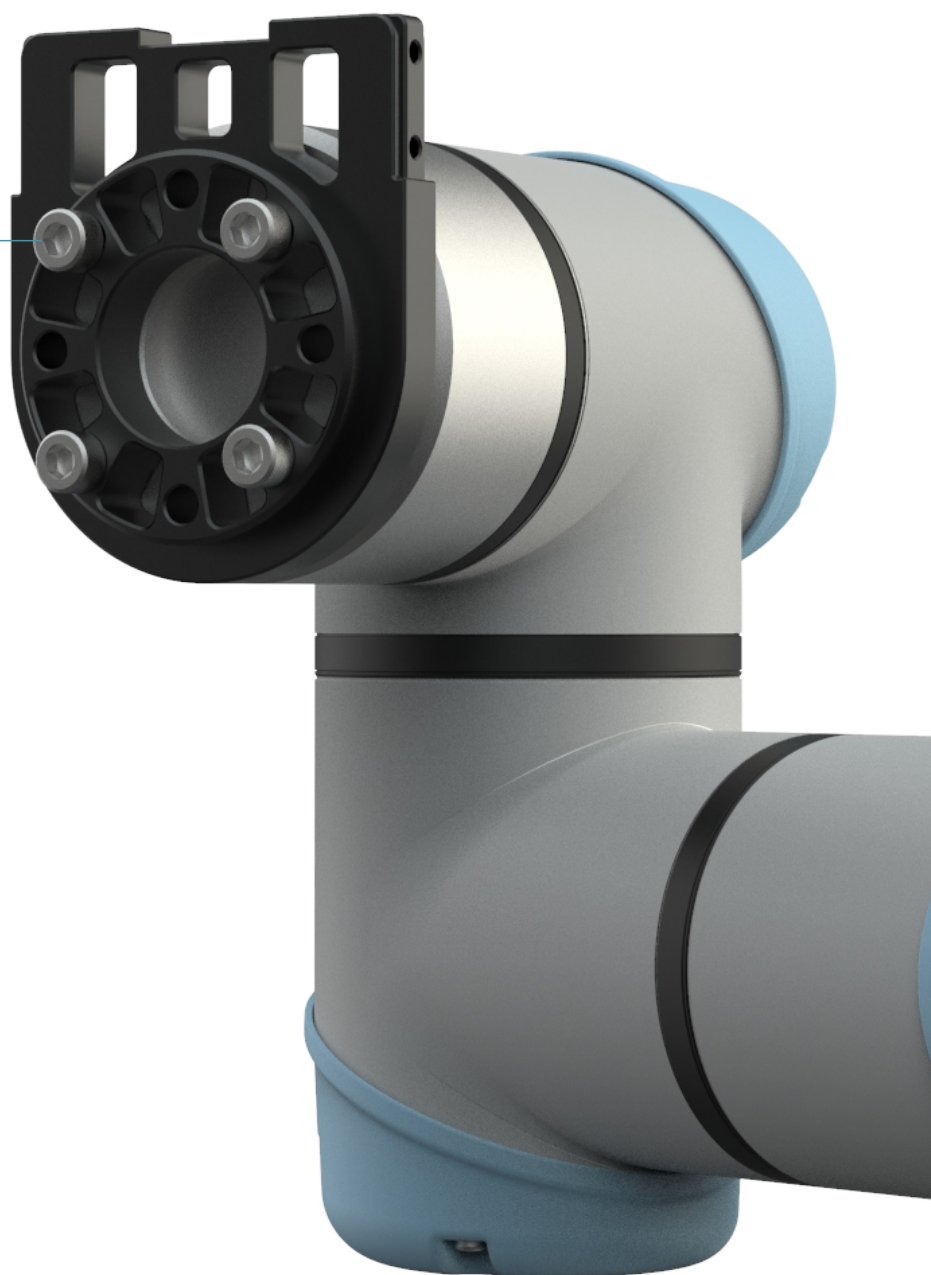

2

M4 x 10
x 2


3 Nm

Torx
20

Install the optional strain relief.

M3x6
x 1

1,5 Nm Torx
10

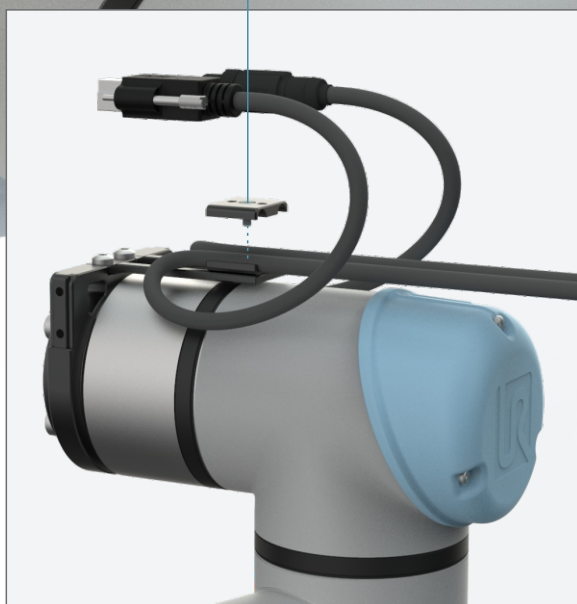

3


M5 x 8
x 4

3 Nm


Torx
25 mm



Mounting:

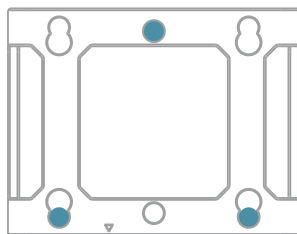

Zivid Two
3 x M5x8
Torx 25

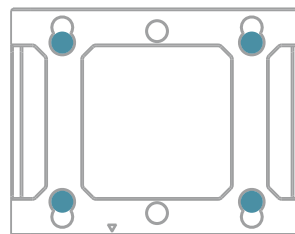

Zivid One+
4 x M6x10
Torx 30

4



Mount the Camera by sliding the Camera Bracket onto the rails of the Robot Adapter



M4x10  x 4

4 Nm  Torx 20

5

Attach cables and guide them through the strain relief..

