


Zivid Stationary Mount

User Guide

(ZVDA-MNT-ST10)

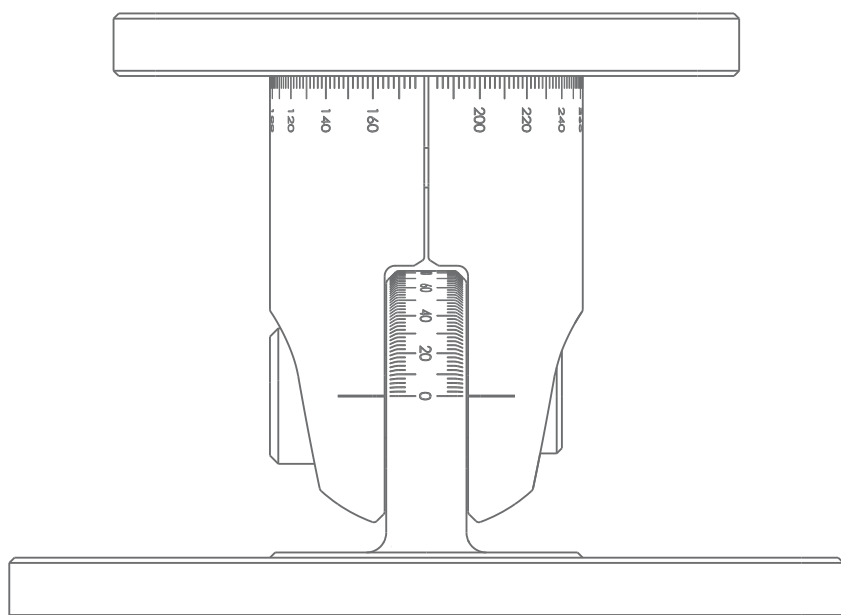


Getting Started

Tools

Hex 4 and 6 mm



Torx 20, 25 and 30

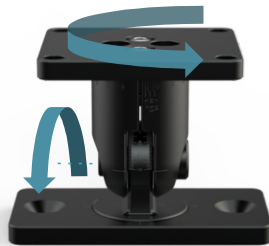

Tilt-Roll



Pan-Tilt

The mount can be re-configured to be either in pan-tilt or tilt-roll. Before you install the mount, evaluate which configuration that best suits your application.

To re-configure the mount, loosen the four M4 screws top and bottom plate, and re-attach them in the new configuration with torque 1,5 Nm.

1



M6x16
x 2

Hex
4 mm




T-slot nut or similar
(not included)


2

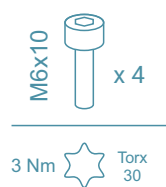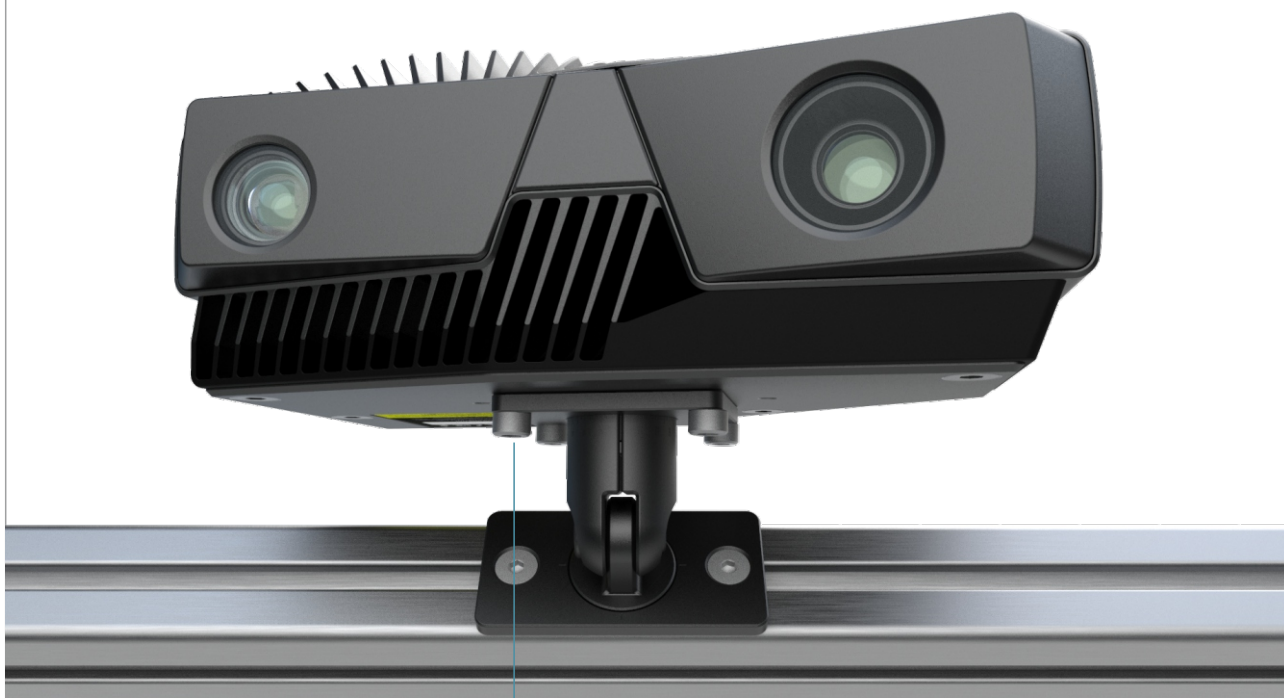

Mounting:

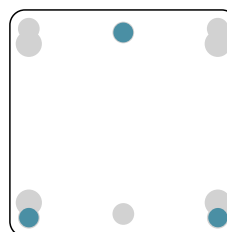

Zivid Two
3 x M5x8
Torx 25

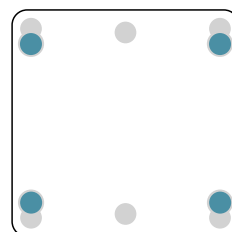

Zivid One+
4 x M6x10
Torx 30

3



5 Nm



Hex
6 mm

Loosen the center bolt to adjust the angle of the Camera.
Tighten the center bolt with a torque of 5 Nm with a 6 mm hex key to fasten.